ROSEN ENTERTAINMENT SYSTEMS

AV7500 Dual DVD Headrest Replacement System

Rosen AV7500 Quick Reference Card

TURN ON THE SYSTEM

a. Turn vehicle ignition to ON or ACC.

b. Press POWER on the front display (FIG 1) or wireless remote (FIG 2) to turn on each system.

FRONT CONTROL PANEL

FIG 1 Power Enter Mode Speaker

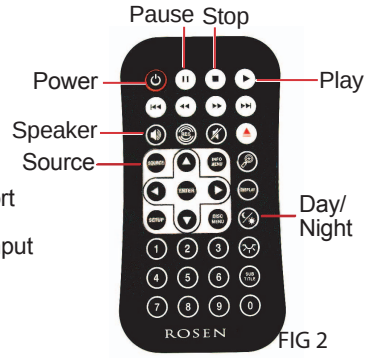

FIG 2

PLAY A DVD OR CD

a. Press and release the MODE button on the front control panel (FIG 1) or the SOURCE button on the remote control (FIG 2) until "DVD PLAYER" appears.

b. Press on the bottom of the display to pivot and access the DVD/CD slot.

c. With the label facing away from you, insert a disc into the disc slot (FIG 3). Do not force disc into slot. If a DVD/CD menu appears on the screen, press PLAY (FIG 2) or ENTER (FIG 1) as instructed on the screen. Most discs will load and play automaticaltely.

d. To obtain the best viewing angle adjust the display angle as needed. (FIG 3)

FIG 3

USE THE HEADPHONES

a. Turn on by pressing the OFF/ON button, located on the ear piece. The power LED on the ear piece should illuminate - if not, check that the batteries have a charge and are inserted properly.

b. The headphones each have a two-position slide switch labeled “CH.A/CH.B.” They must have a clear line of sight to the headrest monitor and must be switched to the designated A/B channel to operate properly.

c. To adjust the volume use the knob on the ear piece.

FIG 4

ROSEN ENTERTAINMENT SYSTEMS

AV7500 Dual DVD Headrest Replacement System

PLAY INTERNAL VIDEO GAMES

a. Press the MODE button on the front control panel (or SOURCE on the remote control) until “INTERNAL GAME” appears on the screen.

b. Turn ON and set the game controller to channel “A” or channel “B” depending on which unit you will play on.

c. Use the game controller's left and right arrow keys to choose a game.

d. Press the START button on the game controller to choose the game.

e. Use the "A & B" buttons for fire, jump or other action.

f. Press RESET to return to the main menu.

Note: If the flashing LED stays illuminated, replace the batteries.

FIG 5

LISTEN OVER VEHICLE SPEAKERS

a. Press the SPEAKER on the remote (FIG 2) or on the front control panel (FIG 1)."SPEAKER SOUND ON FM __._ PRESS LEFT OR RIGHT TO ADJUST" will appear on the screen as shown at right.

b. Turn vehicle's radio on, and tune to the FM frequency displayed on screen. If radio interference is heard, try another frequency (see pages 13 & 15 in your Owner’s Manual for more information).

Rosen AV7500 Quick Reference Card

ROSEN

www.rosenentertainment.com

RES PN AP1026